


POS A3 Menu Assembly Instructions

1

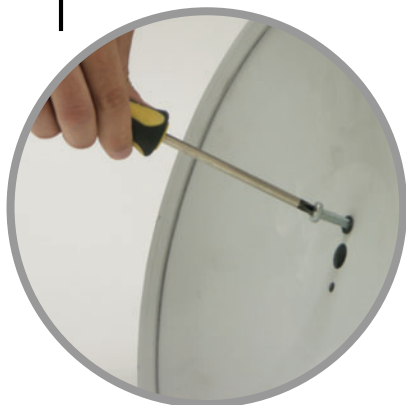


Remove screws and washers from one end of the post and attach circular base.

2



Turn completed stand onto base and remove two screws from top of post.

3

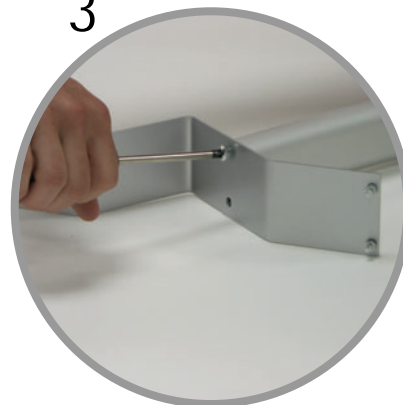


Attach angled bracket to post with curve arching forward.

4



Positioned open snap frame over bracket and locate fixing screw supplied from underside, each time using the nut to hold in place.

5

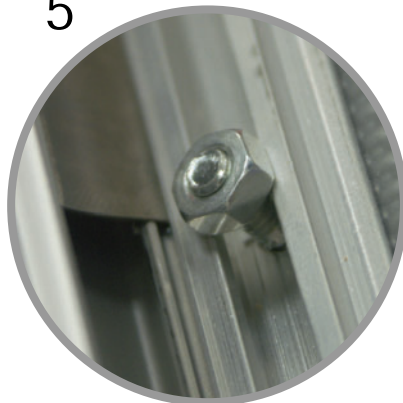

Ensuring snap frame is positioned squarely, tighten nuts to secure.

